



Model 66TS (Aviation Fueling) METRIC



Model 66TS

OPERATION

The 66TS is built on a dual diaphragm chamber valve design. It is opened and closed by pressure applied to either side of the diaphragm. The lower chamber receives pressure from pump discharge and acts to open the valve while loss of this pressure allows the valve spring to close the valve.

Opening Cycle- When the pump discharge pressure reaches 0.3 bar over tank head, the valve begins to open. It is fully open when pump discharge is 1 bar over tank head.

Closing Cycle- Valve closing will start when pump discharge pressure drops for any reason to tank head. This may be due to normal pump shut down, pump failure or line rupture.

Manual Opening- The valve is equipped with an Schrader air valve to enable connection of a pressure source (hand pump, low pressure air bottle, etc.) to open the valve.

Thermal Relief- Pressure buildup of 0.5 - 0.6 bar (above tank head) in the downstream piping will automatically be relieved back through the valve to the tank.

COMPONENTS

- 1.) 66TS Main Valve
- 2.) Ball Valve
- 3.) Shrader Valve
- 4.) Visual Indicator

SIZING

The size of the 66TS is typically the same as the pump suction line. However, the velocity through the valve should never exceed 6 meters/second, as shown below. Valve pressure drop may be cal-culated using the Cv values shown. NOTE: Cv=Flow in M3/HR at 1 bar pressure drop.

The Model 66TS Tank Safety Valve is designed to automatically isolate a fuel storage tank from its loading terminal or product transfer point. Hydraulically linked to the delivery pump, the valve is open only when the pump runs and is effectively producing pressure. The valve will automatically close when the pump is off, fails to produce pressure, or in the event of a line rupture.

SERIES FEATURES


- Totally hydraulic operation; no electrical connections
- Dual chamber, full open, low pressure drop design
- Thermal relief of excess downstream pressure
- Provides anti-siphon protection
- Capable of manual operation
- Can be maintained without removal from the line
- ► Valve position indicator standard

CROSS-SECTION

NRAWING

Factory tested

RECOMMENDED INSTALLATION

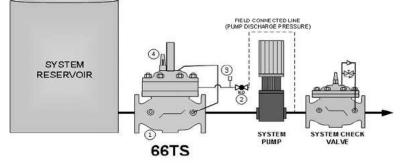

Install the proper size sense line from the pump discharge to the valve connection. Based on a valve-to-pump distance of 180 meters, the following schedule 40 pipe sizes are recommended

| Valve Size: | DN50-80 | DN100-150 | DN200 | DN250 | DN300 |
|------------------|---------|-----------|-------|-------|-------|
| Sense line Size: | 3/8" | 3/4" | 1" | 1 ¼" | 1 ½" |
| OLNOL LINE OILL. | 0,0 | 0,1 | | 1 / 4 | 1 /2 |

- Sense line connection at 66TS should have a ball type or positive shut off type valve installed (to facilitate manual opening).
 To prevent pump cavitation on start-up, pump discharge check valve should be of the slow-opening type to ensure adequate pressure for initial opening of the tank safety valve.
 Install the valve with adequate space above and around the valve to facilitate servicing.
- Refer to the Dimension Table.
- Valve should be installed with the bonnet (cover) at the top.

MAX. PRESSURE (The pressures listed here are maximum working pressures at 37.78°C)

END CONNECTIONS DUCTILE IRON STEEL WCB STEEL LCB STN. STEEL Threaded 44.1 bar 44.1 bar 44.1 bar 44.1 bar Grooved 20.7 bar 20.7 bar 20.7 bar 20.7 bar 150# Flanged 18.4 bar 17.2 bar 19.7 bar 19.0 bar 300# Flanged 44.1 bar 51.0 bar 48.0 bar 49.6 bar

| SIZE, DN | 50 | 80 | 100 | 150 | 200 | 250 | 300 | 400 |
|-------------------------------|----|-----|-----|-----|-----|------|------|------|
| MAX. FLOW, M ³ /HR | 45 | 105 | 182 | 409 | 681 | 954 | 1363 | 2180 |
| Valve Cv | 41 | 104 | 173 | 389 | 649 | 1080 | 1695 | 2465 |

phone: (918)627.1942 • fax: (918)622.8916 • 7400 East 42nd Place, Tulsa, OK 74145 email: sales@controlvalves.com • website: www.controlvalves.com

Global performance. Personal touch.



01750

| SIZES |
|--|
| Screwed Ends - 2" - 3" |
| (DN50 thru DN80) |
| Grooved Ends - 2" - 6" (globe) |
| |
| (DN50 thru DN150) |
| 2" - 6" (angle) |
| (DN50 thru DN150) |
| Flanged Ends - 2" - 16" (globe) |
| (DN150 thru DN400) |
| 2" - 16" (angle) |
| (DN150 thru DN400) |
| FLUID OPERATING TEMPERATURE RANGE |
| (Valve Elastomers) |
| Buna-N -40°C to 82.22°C |
| |
| Viton -6.67°C to 110°C |
| Fluorosilicone -40°C to 65.56°C |
| EPDM -17.78°C to 110°C |
| MATERIALS Consult factory for others. |
| Body/Bonnet: Ductile Iron |
| (epoxy coated), Carbon Steel (epoxy |
| coated), Stainless Steel |
| Seat Ring: Stainless Steel, Bronze |
| <i>Stem:</i> Stainless Steel, Monel |
| |
| Spring: Stainless Steel |
| Diaphragm: Buna-N, Viton, |
| (Nylon reinforced) |
| Seat Disc: Buna-N, Viton |
| Tubing & Fittings: Stainless Steel |

SPECIFICATIONS (Typical Aviation Fueling Application)

The tank safety valve shall operate by means of hydraulic pressure from the transfer pump discharge. The valve shall open on positive pressure and close on loss of pressure. It shall be equipped to relieve downstream to upstream in the event of thermal buildup. It shall be equipped with a manual opening feature and valve position indicator.

DESIGN

The tank safety valve shall be a single-seated, dual chamber, diaphragm actuated globe valve. The valve shall seal by means of a corrosion-resistant seat and a resilient, rectangular seat disc. These, and other parts, shall be replaceable without removing the valve from the line. The stem of the main valve shall be guided top and bottom by integral bushings. Alignment of the body, lower chamber and diaphragm assembly shall be by precision dowel pins. The diaphragm shall not be used as a seating surface, nor shall the pistons be used as an operating means. The tank safety valve shall be operationally and hydrostatically tested prior to shipment.

MATERIALS OF CONSTRUCTION

The main valve body and bonnet shall be ductile iron. All ferrous surfaces shall be coated with 4 mils of epoxy. The main valve seat ring shall be stainless steel. Elastomers (diaphragms, resilient seats and O-rings) shall be Buna-N.

ACCEPTABLE PRODUCTS

The tank safety valve shall be a <size> Model 66TS, <globe pattern, angle pattern>, with <150# flanged, 300# flanged, threaded, grooved > end connections, as manufactured by OCV Control Valves, Tulsa, Oklahoma, USA.

| DIM | ANSI FLANGE | DN50 | DN80 | DN100 | DN150 | DN200 | DN250 | DN300 | DN400 |
|-----|-------------|------|------|-------|-------|-------|-------|-------|-------|
| A | 150 | 238 | 305 | 381 | 451* | 645 | 756 | 864 | 1026 |
| | 300 | 251 | 324 | 397 | 473* | 670 | 791 | 902 | 1067 |
| В | 150 | 76 | 95 | 114 | 140 | 171 | 203 | 241 | 298 |
| | 300 | 83 | 105 | 127 | 159 | 191 | 222 | 260 | 324 |
| С | ALL | 250 | 273 | 343 | 445 | 508 | 584 | 635 | 813 |
| D | ALL | 86 | 111 | 149 | 178 | 267 | 311 | 356 | 438 |
| E | ALL | 105 | 130 | 162 | 219 | 305 | 356 | 406 | 489 |

*Note: for military fueling valves, 6" (DN150) 150# flanges have 20" (20 mm) face to face dimensions and 6" (DN150) 300# flanges have 20-7/8" (208 mm) face to face dimensions.

CE Markings

Applies to fuel valves installed in the European Union in accordance with the Pressure Equipment Directive, 97/23/EC

CE-marked valves are available in LCB steel and CF8M stainless steel only OCV is registered to the PED through Det Norske Veritas The following valves will be CE-marked:

- 6" (DN150) and larger valves, 150# and 300# class, liquid fuel only
 2" (DN50) thru 4" (DN100) valves, 300# class, liquid fuel
 1 1/4" (DN32) thru 4" (DN100) valves, 300# class, LPG or Butane
- service 4" (DN100) and smaller valves in Class 150# (liquids) are furnished under SEP with no CE-mark


For maximum efficiency, the OCV control valve should be mounted in a piping system so that the valve bonnet (cover) is in the top position. Other positions are

acceptable but may not allow the valve to function to its fullest and safest potential. In particular, please consult the factory before installing 8" (DN200) and larger valves, or any valves with a limit switch, in positions other than described. Space should be taken into consideration when mounting valves and their pilot systems.

A routine inspection & maintenance program should be established and conducted yearly by a qualified technician. Consult our factory @ 1-918-627-1942 for parts and service.

How to order your Model 66TS valve

When ordering please provide: Fluid to be controlled - Model Number - Size - Globe or Angle - End Connection -Body Material - Trim Material - Elastomers - Special Requirements / Installation Requirements

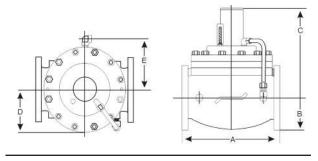

QUALITY SYSTEM REGISTERED TO ISO 9001

phone: (918)627.1942 • fax: (918)622.8916 • 7400 East 42nd Place, Tulsa, Oklahoma 74145 email: sales@controlvalves.com • website: www.controlvalves.com

Global performance. **Personal** touch.