# installation, operating, and maintenance instrucitons

# tank safety valve

# model 66TS

#### **GENERAL DESCRIPTION**

In most refinery applications, product storage tanks are located at a remote distance from the loading facilities. This practice is, of course, very wise from a safety standpoint. In order to maximize the safety of such a system, the tank should also be isolated from the loading facilities at all times that a loading operation is not taking place. In this way the tank can be protected in case of a fire or in case of rupture of the delivery piping.

Such an arrangement requires a valve. The simplest approach would be to provide a manual on-off valve at the tank. However, this would require a second person, in addition to the loading man, to insure that the valve was open at the start of the loading operation and closed when loading was completed. This system would be inconvenient and, if mistakes were made, extremely costly. Forgetting to open the valve to start loading could result in damage to the delivery pump. Forgetting to close the valve after loading would compromise the safety of the entire system.

A far better approach is an automatic valve located at the tank. This valve would open quickly and fully when the delivery pump was started and close immediately and tightly on pump shutdown. It would remain closed at all times the pump was not running. For the utmost in safety and reliability it should be completely hydraulic in operation—i.e., no electrical power required, yet it should be completely operable even when it is at a remote distance from the delivery pump.

The OCV Model 66TS Tank Safety Valve is specifically designed to meet all of the requirements outlined above. Physically, the 66TS is a single-seated, hydraulically-operated, diaphragm-actuated globe valve designed to operate from the pressure differential created by the delivery pump. It is a power-actuated type valve with isolated upper and lower diaphragm chambers. Thus the actuating pressure differential is completely independent of the flow loss through the valve, enabling the total pressure drop in the pump suction line to be kept to a minimum.

The 66TS will start to open when the pump differential reaches 5 psi. Specially designed valve internals allow sufficient flow to the pump after only a small degree of opening. The valve will be fully open when the pump differential reaches 15 psi. With a properly sized sense line and a minimum of 30 psid available from the pump, the total opening cycle will take no more than 10 seconds. On pump shutdown, the valve will immediately start closed. With a properly-sized sense line the closing cycle will take no more than 15 seconds.

Once closed, the 66TS will remain closed until the pump is once again started. The valve is fail-safe—i.e., if its diaphragm should fail, the valve will close whether or not the pump is running. The valve also contains a built-in thermal relief feature: if the downstream pressure should building to approximately 6-10 psi above tank head, the valve will open slightly to relieve excess pressure back to the tank.

model 66TS page 2

# **MANUAL OPENING (OPTIONAL)**

The 66TS can be fitted with a manual opening feature which enables the valve to be pumped open with a hand pump to gravity-feed the system in case of delivery pump malfunction.

#### INSTALLATION

Proper installation of the 66TS is essential to its correct operation in the system. The recommended installation is shown schematically on drawing 66TS-XXX.

The tank safety valve itself should be installed as close as possible to the tank in order to maximize its objective of tank isolation.

The manual isolation valves shown are not essential to system operation but are extremely desirable should internal maintenance have to be performed on the tank safety valve.

The pump must be capable of developing a pressure differential of at least 15 psi above tank head at full flow in order to fully open the tank safety valve.

Proper sizing of the sense line between the pump discharge and tank safety valve is extremely important, especially when the valve and pump are an appreciable distance apart. Undersizing of this line will result in slower opening and closing of the valve. Notice that the recommendations shown are based on a 10-second opening with a 30-psi pump and a 15-second closing. If faster operation is desired, or a weaker pump is employed, the sense line should be increased proportionately.

In many systems, the line downstream of the pump is essentially "open" when the pump is started. Starting the pump under such low head conditions will result in insufficient differential to open the tank safety valve. The combination of low head and no suction supply can bring about immediate and extreme cavitation of the pump. In order to prevent this occurrence, it is highly recommended that a slow-opening check valve be installed on the pump discharge. In this way the pump starts against a closed valve, the discharge head is immediately high, the tank safety valve opens readily, and, as the check valve slowly opens, there is a smooth transition from no flow to full flow, with no risk of pump cavitation.

The check valve also serves to prevent backflow of product into the storage tank when the pump is off. Note that the tank safety valve itself provides limited backflow

protection, but only to 6-10 psi back pressure. If the backflow potential is greater than this, the check valve is a necessity.

In short, the slow-opening check valve can safely be omitted only if both the following conditions exist: (1) the discharge piping is "closed" on pump start-up and is full of fluid at all times, and (2) backflow protection above 6-10 psi is not necessary.

Three other features, not shown on the installation diagram, are desirable:

- The sense line between the valve and pump discharge should be kept clear and free of buildup of particulate matter. To insure this, install a strainer in the sense line at the pump discharge. The strainer should, of course, be of at least the same nominal size as the sense line.
- 2. If the slow-opening check valve is used, and thermal pressure buildup in the piping downstream of the check valve is a possibility, a thermal relief valve should be installed on the check valve to relieve this pressure back to the pump side. It will then be led back to the tank by the built-in thermal relief feature of the tank safety valve.
- If the tank safety valve is equipped with the manual feature, a manual on-off valve should be a low-loss type such as a gate or ball valve.

#### THEORY OF OPERATION

The 66TS is actuated by a differential pressure acting across its diaphragm. The lower diaphragm chamber receives pressure from the pump discharge. This pressure acts in the direction to open the valve. The upper diaphragm chamber senses pump suction pressure and also contains the valve spring. These forces act in the direction to close the valve.

There is also a net closing force across the valve seat caused by the differential of tank head acting over the seat and pump suction pressure acting under the seat.

OPENING CYCLE: When the pump is started, its discharge pressure starts to rise. When this pressure rises to 5 psi over tank head, the closing forces acting on the valve are overcome and the valve starts open. The discharge pressure continues to increase. When it reaches 15 psi over tank head, the valve will be fully open.

CLOSING PRESSURE: When the pump is stopped, the discharge and suction pressures become equal to tank model 66TS page 3

head. There are now no differential pressures acting on the valve, only the closing force created by the spring. Therefore the valve closes readily.

THERMAL RELIEF: With the valve closed and the pump off, there are normally no differential forces on the valve except for the spring. However, if there is a thermal pressure buildup in the downstream piping, an opening force will be applied under the valve seat. When this pressure is sufficient to overcome the spring (6-10 psi over tank head), the valve will open a small amount and relieve the excess pressure back to the tank.

#### **MAINTENANCE**

Visual inspection at periodic internals is required to determine the general physical condition of the equipment. This inspection should be conducted at no more than 30 day intervals. The following is a list of "check points" to assist maintenance personnel in this task.

- a. Check for chipped or peeling paint.
- b. Check that all tube fittings on the valve are secure.
- c. Check for damaged tubing.
- d. Check for leaks at fittings and around bonnets and flanges.
- e. Check for loose bolts on bonnets and flanges.

#### TROUBLESHOOTING

The 66TS, due to its rather simple construction and positive action, should provide virtually trouble-free operation. If problems should occur, the following outline should enable maintenance personnel to isolate the specific malfunction and take the appropriate remedial action.

# A.VALVE FAILS TO OPEN OR OPENS TOO SLOWLY

- Sense line too small—See chart on drawing 66TS-XXX.
- Sense line clogged—Clean strainer if one is installed. If not, clean sense line as required and install strainer in sense line where it joins the pump discharge line.

3. Main valve diaphragm ruptured—replace diaphragm.

NOTE: Any time maintenance is required inside the valve, close the manual isolation valves located on either side of the valve. Due to the heavy spring employed in the 66TS, use extreme caution in removing the bonnet. Remove all bonnet nuts except two located at opposite sides of the bonnet. Loosen these two nuts slowly and evenly until the spring tension is relieved. When reassembling the valve, "jack" the bonnet down against the spring with two nuts at 180°, tightened evenly.

4. Valve stem binding—Disassemble valve as noted above and check the stem and upper and lower bearing areas for burrs, deep scratches, or buildup of foreign material. Clean and polish as required.

B.VALVE FAILS TO CLOSE OR CLOSES TOO SLOWLY

- 1. Sense line too small—See A1 above.
- 2. Sense lien clogged—See A2 above.
- 3. Valve stem binding—See A4 above.


#### **MANUAL OPENING OPTION**

The manual opening feature is provided by means of a Schrader valve which is installed at the inlet port of the 66TS intermediate plate. To complete the requirements for this option, a manual on-off valve must be installed in the sense line leading from the pump discharge. For convenience, the valve should be installed near the point where the sense line connects to the body. The on-off valve should be of a low-loss type such as a ball valve or gate valve.

To manually open the 66TS, first close the on-off valve. Connect the pressure source (hand pump, low pressure air bottle, etc.) to the Schrader valve. The 66TS can then be opened fully by applying pressure equal to 15 psi over tank head.

To return the 66TS to the closed position, simply remove the pressure source and open the on-off valve.

STN STEEL

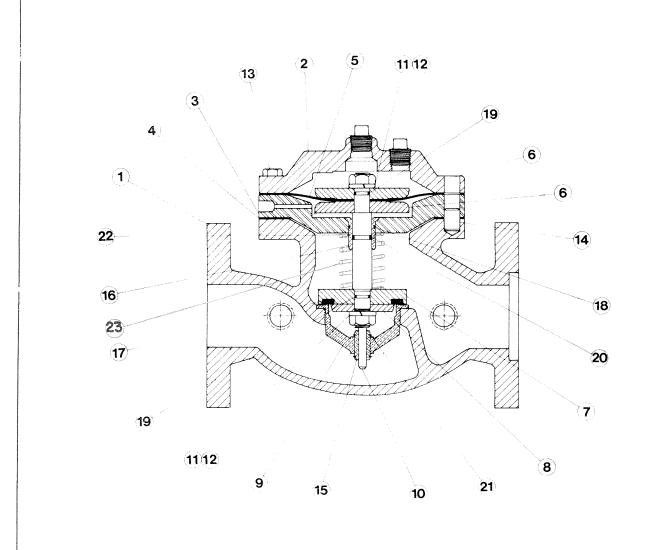



NOTE

1. WHEN ORDERING PARTS PLEASE
SPECIEV DESCRIPTION PART
NUMBER AND MATERIAL
2. Δ-RECOMMENDED SPARE PARTS
3. OP PARTS USED WHEN STAINLESS
STEEL SEAT RING IS FURNISHEO


23 650721 | SPRING

22 630711 1 RETAINING RING STN STEEL 630705 0 RETAINING RING STN STEEL 20 611111 VITON Δ O-RING VITON Δ O-RING Δ 18 610018 O-RING BUN -N 17 691500 690500 VITON SEAT DISC Δ BUNA-N 0 16 300165 GUIDE BUSHING BRASS 300037 DELRIN SEAT RING BUSHING 14 620701 DOWEL PIN STM STEEL 13 531012 8 CAPSCREW CAD PL STL 12 685703 11 590709 10 313719 9 311700 311100 STN STEEL LOCKWASHER STEM NUT STN. STEEL STEM STN. STEEL 0 STN. STEEL SEAT RING BRONZE e 309000 SEAT RETAINER CAST IRON 306440 STEEL SEAT PLATE 307430 STEEL DIAPHRAGM PLATE VITON Δ 5 690011 DIAPHRAGM BUNA-N 4 693108 693008 VITON Δ GASKET BUNA-N 3 306430 306030 CAST STEEL INTERMEDIATE PLATE CAST IRON 2 303330 303030 CAST STEEL BONNET CAST IRON 1 301300 BODY ANSI 150 LB CAST STEEL BODY ANSI 125 LB CAST IRON ITEM OCV NO. QTY. DESCRIPTION MATERIAL

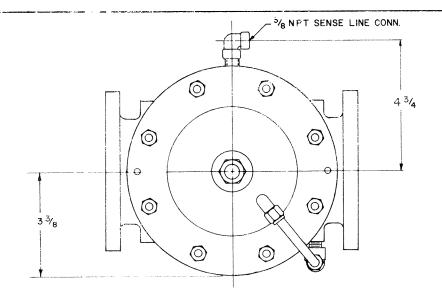

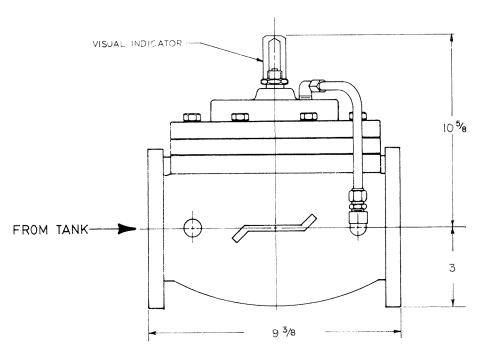

#### RECOMMENDED INSTALLATION

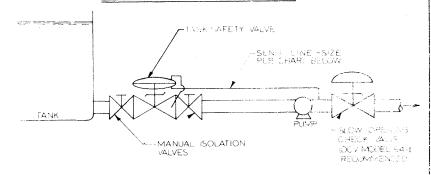

## **SPECIFICATIONS**


PRESSURE REO'D TO START VALVE OPEN
PRESSURE REQ'D TO FULLY OPEN VALVE15 PSID*
VALVE OPENING TIME
VALVE CLOSING TIME
VALVE C <sub>V</sub> (FULL OPEN)
VALVE WILL AUTOMATICALLY CLOSE IF DIAPHRAGM FAILS

\*PUMP DISCHARGE HEAD MINUS FANK HEAD

# SENSE LINE REQUIREMENTS

MIN SCHED) PIPE SIZE
1/4
<sup>3</sup> / <sub>8</sub>
1/2


E			MATERIAL	TOLERANCES	OCV Control Valvas
D				UNLESS NOTED	
С				DECIMAL ± 008	2" TANK SAFETY VALVE
8				ANGULAR ± 1/20	
Α			NO REG'D	DRAWN BY DATE	The second secon
сна	E. C. NO DATE UT		BCA'LE	CHKD BY DATE	t <b>(</b>
ſ	REVISIONS	REF DWG NO'S		1 :	

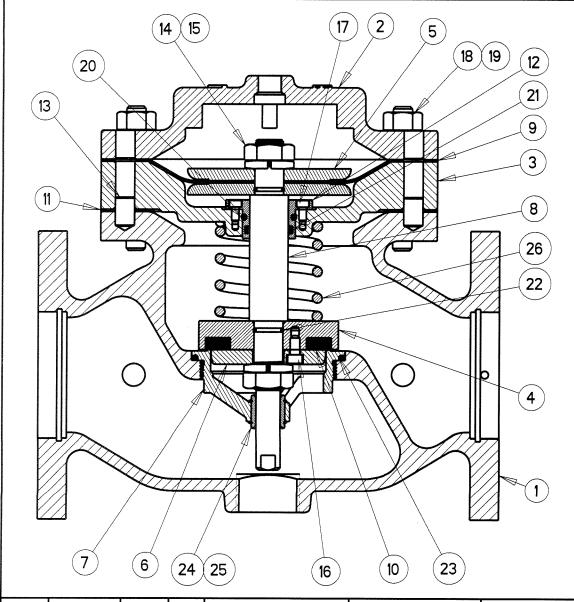


ITEM	PART NO	QTY	DESCRIPTION	MAT'L							
1	301091	1	BODY	DUCT. IRON							
2	303092	1	BONNET	DUCT. IRON							
3	306091	1	INTERMEDIATE PLATE	DUCT. IRON							
4	306491	1	SEAT PLATE	STN. STL.							
5	307092	2	DIAPHRAGM PLATE	STN. STL.							
6	309092	1	SEAT RETAINER	STN. STL.							
7	311791	1	SEAT RING	STN. STL.							
8	313792	1	STEM	STN. STL.							
9	690093 <sup>x</sup>	1	DIAPHRAGM	BUNA-N							
10	690591 <sup>2</sup>	1	SEAT DISC	BUNA-N							
11	693091×	1	GASKET	BUNA-N							
12	320076	1	GUIDE BUSHING	DELRIN							
13	620701	2	DOWEL PIN	STN. STL.							
14	590747	2	HEX NUT	STN. STL.							
15	685712	2	LOCK WASHER	STN. STL.							
16	530700	3	SKT. HD. CAPSCREW	STN. STL.							
17	530702	2	SKT. HD. CAPSCREW	STN. STL.							
18	300681	8	STUD	ZN PL STL							
19	590011	8	HEX NUT	ZN PL STL							
20	610123 <sup>1</sup>	1	O-RING	BUNA-N							
21	610214 <sup>1</sup>	1	O-RING	BUNA-N							
22	610016 <sup>1</sup>	2	O-RING	BUNA-N							
23	610154×	1	O-RING	BUNA-N							
24	300071	1	LOWER BUSHING	TEFLON.							
25	630711	2	SNAP RING	STN. STL.							
26	650772	1	SPRING	STN. STL.							


\* = RECOMMENDED SPARE PARTS

E							MATERIAL	TOLER	ANCES		OCV Control Valves
D								UNLESS NOT		TULSA OKLAHOMA USA	
С							150# DIST	.XXX ±.00	)5	3" 3100 TANK SAFETY VALVE	
В								ANGULAR ±			3 3100 TANK SAFETT VALVE
Α							NO. REQ'D	DRAWN BY	DATE	SIZE	DRAWING NUMBER REV
<del></del>	ECNI	DATE	DV					SDJ	03-06-06	Λ	
CHG	ECN	DATE	ום				SCALE	CHKD BY	DATE	//	3150TS
	REVISION	ONS		REF	DWG	NO'S	40%			$\Box$	313013

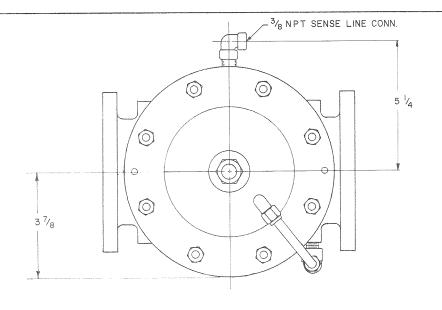

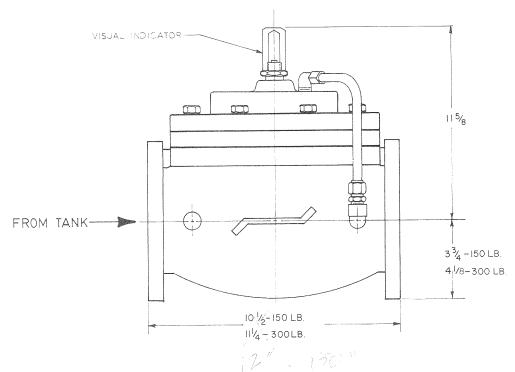

#### RECOMMENDED INSTALLATION

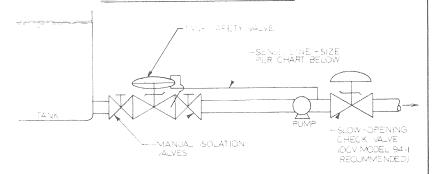

#### <u>SPECIFICATIONS</u>

PRESSURE REDID TO START VALVE OPEN
PRESSURE REQIDITO FULLY OPEN IVALVE
VALVE OPENING TIME
VALVE CLOSING TIME
MALVE C <sub>V N</sub> EULL OPENA
JA JE WIEL AUTOMATICACEY CLOSE IF DIAPHRAGM FAILS.

## SENSE LINE REQUIREMENTS

\*PUMP DISCHARGE HEAD MINUS TANK HEAD


MIN SCHED 40 PIPE SIZE
1/4
<sup>3</sup> / <sub>8</sub>
1/2

E	CONTROL STATE OF THE STATE OF T	- CONTRACTOR CONTRACTO	CHECK SHOWN		MATERIAL	TOLERA		6.50	i. Maa ofe
D						UNLESS NO		Per	Mu
c						DECIMAL± MACH. FINI	005	-	211 -
В						ANGULAR ±			2 1
	İ	-			NO REQ'D	DRAWN BY	DATE	SIZE	
A								Samuel .	Í
CHG	E. C. NO	DATE	BY		SCALE	CHKD, BY	DATE	(	i
	PEVISI	ONS		REE DWG NO'S		1	1 1		i .

SCHOOL STREET, WASHINGTON, NAME OF THE PARTY	Market Market Committee of the Committee	NO DESCRIPTION OF THE OWNER, THE
40000	_	
S. CONTROL OF THE S. CONTROL OF THE S. CO.	(Fill arm model motors)	Marin de come con
	Control	
Threatestand entitle details and	ABBID AND ALL DI APPLE AND OF	CALL VACUATOR HIS AND
	TULSA.	UNLANUIVA, D 3 A

3" TANK SAFETY VALVE


	SIZE	DRAWING NUMBER	_ K
	A COUNTY OF THE PERSON NAMED IN		l
١		CCTC-OZA	ł
	1 %	I BOIS USA I	l

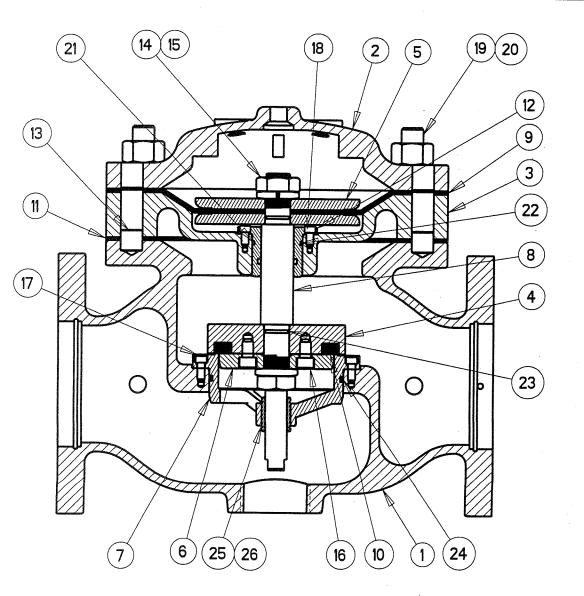


11 1 1		PART NO	QTY	DESCRIPTION	5.6.370
#	1	301044	1 1	DESCRIPTION	MAT'L
<b>-</b>	2			BODY	DUCT. IRON
		303045		BONNET	DUCT. IRON
	3	303044	1	INTERMEDIATE PLATE	DUCT. IRON
	4	306404	1_	SEAT PLATE	STN. STL.
	5	307746	2	DIAPHRAGM PLATE	STN. STL.
	<u>3</u>	309045	1	SEAT RETAINER	STN. STL.
	7	311744	1	SEAT RING	STN. STL.
Name and Address of the Owner, where	3	313742	1	STEM	STN. STL.
(	9	690387:	1	DIAPHRAGM	NYLON/BUNA-N
1	0	690544	1	SEAT DISC	BUNA-N
1	1	693044 <sup>1</sup>	1	GASKET	BUNA-N
1	2	320046	1	GUIDE BUSHING	DELRIN
1;	3	300708	2	DOWEL PIN	STN. STL.
14	4	590733	2	HEX NUT	STN. STL.
1	5	685708	2	LOCK WASHER	STN. STL.
16	3	530719	4	SKT. HD. CAPSCREW	STN. STL.
1	7	530701	6	SKT. HD. CAPSCREW	STN. STL.
18	3	530707	4	SKT. HD. CAPSCREW	STN. STL.
19	<b>∍</b> ∏	300094	8	STUD	ZN PL STL
2	0	590005	8	HEX NUT	ZN PL STL
2	1	610129 <sup>2</sup>	1	O-RING	BUNA-N
2		610216 <sup>1</sup>	1	O-RING	BUNA-N
2	3	610018-	2	O-RING	BUNA-N
2		610245	1	O-RING	BUNA-N
2		300645	1	LOWER BUSHING	TEFLON
2	_	630707	$\frac{\dot{2}}{2}$	SNAP RING	STN. STL.


\* FRECOMMENDED SPARE PARTS SPARE PARTS KIT P/N 906044

E					_		MATERIAL	TOLER	ANCES		OCV Control Valves
D								UNLESS NOT			TULSA OKLAHOMA USA
С							150# DIST	.XXX ±.00	)5		
В								ANGULAR =		4	4" 4400 POWER-ACTUATED VALVE
Α							NO, REQ'D	DRAWN BY	DATE	SIZE	DRAWING NUMBER REV
CHG	ECN	DATE	BY		<del></del>		SCALE	SDJ	10-04-04	Λ	
	REVISIONS			REF	DWG	NO'S		CHKD BY	DATE	A	4450

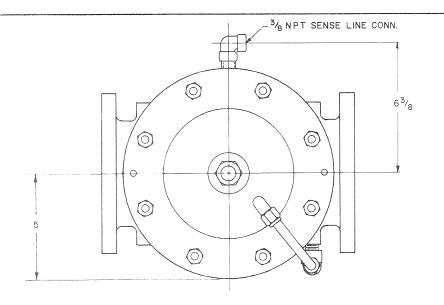

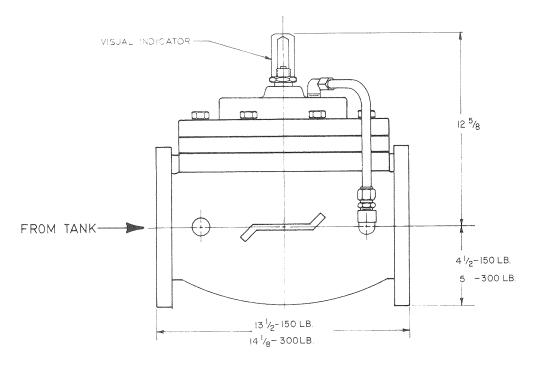

# RECOMMENDED INSTALLATION

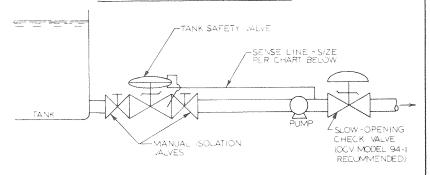

# SPECIFICATIONS

PRESSURE REQ'D TO START VALVE OPEN	5 PSID*
PRESSURE REO'D TO FULLY OPEN VALVE	15 PSID*
VALVE OPENING TIME	10 SECONDS OR LESS WITH 30 PSID* MIN. OPERATING PRESSURE & SENSE LINE SIZED PER CHART BELOW.
VALVE CLOSING TIME:	15 SECONDS OR LESS WITH SENSE LINE SIZED PER CHART BELOW.
VALVE C <sub>V</sub> (FULL OPEN)	200

<sup>\*</sup>PUMP DISCHARGE HEAD MINUS TANK HEAD

# SENSE LINE REQUIREMENTS


VALVE WILL AUTOMATICALLY CLOSE IF DIAPHRAGM FAILS.

MIN SCHED 40 PIPE SIZE
1/4
<sup>3</sup> / <sub>8</sub>
1/2


E		1			MATERIAL	TOLERA		l vi	il or or u	Pantreal V	Lifea Barreso a	e 1
D						UNLESS NO FRACTIONA		P		Gonda V	KLAHOMA, U.S.	2
С						DECIMAL±		_	μ ΤΔΝΚ	SAFETY	VALVE	- 1
В					****	ANGULAR †	HOMEON CONTRACTOR	MAN CONTRACTOR TO SE				
Α					NO REQ'D	DRAWN BY	DATE	SIZE		RAWING NUMBER		REV
сна	E. C. NO	DATE	BY		SCALE	СНКО. ВУ	DATE		66	TS-04	ΔΙ	NEWSON
REVISIONS				REF DWG NO'S				Name of the last				

#### NOTES: I. WHEN ORDERING PARTS, PLEASE SPECIFY SERIES NUMBER, PART NUMBER AND MATERIAL . 2. A= RECOMMENDED SPARE PARTS. 3. O = PARTS USED WHEN STAINLESS STEEL SEAT RING IS FURNISHED. 38 300155 BRASS INDICATOR BUSHING LOCKWASHER STN. STEEL 37 685726 HEX NUT STN. STEEL 36 590735 VITON 611016 $\triangle$ | 35 0-RING BUNA-N 610016 620700 ROLL PIN STN. STEEL Boodensonning VITON 33 O-RING 611010 ACRYLIC INDICATOR HOUSING 32 316001 5 BRASS 31 300182 SPRING RETAINER STN, STEEL 300753 30 INDICATOR ADAPTER 19 BRASS 300153 29 650435 INDICATOR SPRING STEEL 316006 INDICATOR STEM STN. STEE! 27 RETAINING RING STN. STEEL 630723 4 DELRIN GUIDE BUSHING 26 300086 LOWER BUSHING TEFLON $\bigcirc$ 25 300059 3 VITON 611218 O-RING 24 BUNA - N 610218 VITON 611220 O-RING 23 BUNA - N 610220 35 VITON 611020 22 D-RING BUNA - N 610020 NCTIV 611259 O-RING 21 BUNA-N 610259 CAD.PL.STEEL 590005 HEX NUT 20 CAD.PL.STEE: STUD 300094 12 SOCKET HEAD CAPSCREW STN. STEEL 18 530701 685712 LOCKWASHER STN. STEEL HEX NUT STN, STEEL 16 590721 STN. STEEL DOWEL PIN 300708 RETAINING RING STN. STEEL 14 630724 GUIDE BUSHING BRONZE 13 (18) 300186 NI. PL.STEEL SPRING 650002 BUNA - N 693014 GASKET 6 313743 STEM STN. STEEL VITON 691503 SEAT DISC 9 9 BUNA-N 690503 311714 SEAT RING 8 BRONZE 311114 SEAT RETAINER STEEL 309417 8 SEAT PLATE STEEL 306450 307433 STEEL DIAPHRAGM PLATE 690143 VITON DIAPHRAGM 690043 BUNA-N CAST STEEL 306339 INTERMEDIATE PLATE CAST STEEL 303455 BONNET ASSEMBLY 301703 BODY - ANSI 300 LB CAST STEEL BODY - ANSI 150 LB 301303 OCV NO. QTY DESCRIPTION MATERIAL. TEM MATERIAL TOLERANCES KOCV Control Valves UNLESS NOTED FRACTIONAL ± 1/6 (25)(36) DECIMAL ± 005 MACH FINISH 125 6" TANK SAFETY VALVE В ANGULAR ± 1/20 DRAWN BY DATE DRAWING NUMBER REV. NO REO'D SIZE RON 10-83 6197 CHG E. C. NO DATE BY Д DATE REF DWG NO'S REVISIONS

TYPE PRINTED ON RIDGWAT 8 1000-H

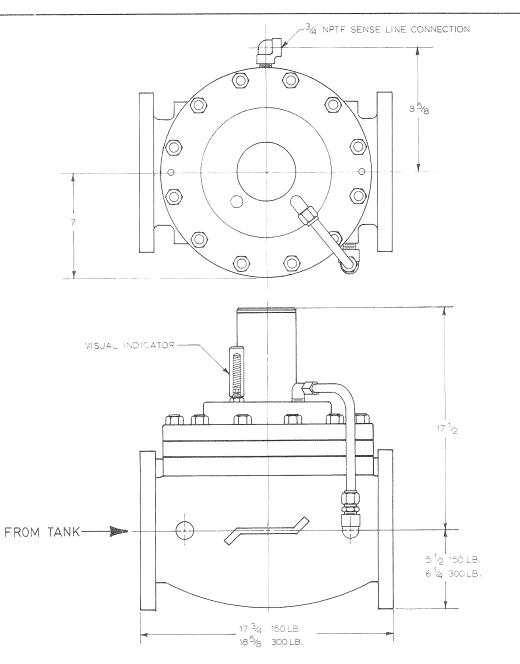

#### RECOMMENDED INSTALLATION

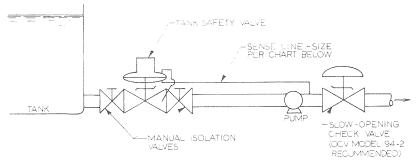

#### SPECIFICATIONS

VALVE WILL AUTOMATICALLY CLOSE IF DIAPHRAGM FAILS.

\*PUMP DISCHARGE HEAD MINUS TANK HEAD

#### SENSE LINE REQUIREMENTS

DISTANCE, FT. VALVE TO PUMP	MIN. SCHED 40 PIPE SIZE
0-35	3/8
36 - 120	1/2
121 – 450	3/4
451 – 1500	1

REF DWG NO'S

REVISIONS


**10**0 GV Control Valves

6" TANK SAFETY VALVE

DRAWING NUMBER
66TS-06A

Was the


TABLE OR WITED ON A DOMEST & COOK

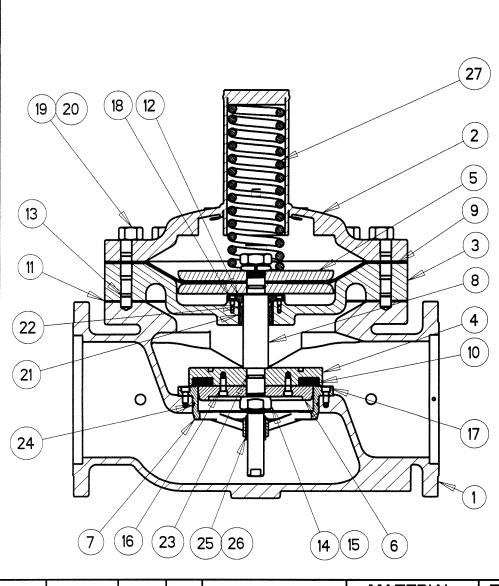


ITEM	PART NO	QTY	DESCRIPTION	MATERIAL
1	301084	1	BODY	DUCT. IRON
	301384	·		CAST STEEL
2	303484	1	BONNET	CAST STEEL
3	306084	1	INTERMEDIATE PLATE	DUCT. IRON
	306384			CAST STEEL
4	306484	1	SEAT PLATE	STEEL
5	307384	2	DIAPHRAGM PLATE	STEEL
6	309085	1	SEAT RETAINER	DUCT. IRON
7	311184	1	SEAT RING	BRONZE
	311784#			STN. STL.
8	313785	1	STEM	STN. STL.
9.	690085	1	DIAPHRAGM	BUNA-N
	690185		DIAI TITAONI	VITON
10.	690584	1	SEAT DISC	BUNA-N
.0	691584	'	DEAT DIOC	VITON
11:	693084	1	GASKET	BUNA-N
"	693184	•	OAORET	VITON
12	300287	1	GUIDE BUSHING	BRONZE
	300288			STN. STL.
13	300708	2	DOWEL PIN	STN. STL.
14	590724	2	HEX NUT	STN. STL.
15	685717	2	LOCK WASHER	STN. STL.
16	530718	8	SKT. HD. CAPSCREW	STN. STL.
17	530711	8	SKT. HD. CAPSCREW	STN. STL.
18	530700	4	SKT. HD. CAPSCREW	STN. STL.
19	300684	12	STUD	ZN PL. STL.
20	590010	12	HEX NUT	ZN PL. STL.
21:	610227	1	O-RING	BUNA-N
Z1'	611227	1	U-MING	VITON
22	610327		O DINC	BUNA-N
22:	611327	1	O-RING	VITON
	610214		O DIAIO	BUNA-N
23 <sup>,</sup>	611214	2	O-RING	VITON
	610268		O DINO	BUNA-N
24-	611268	1	O-RING	VITON
25#	300074	1	LOWER BUSHING	TEFLON
26#	630713	2	SNAP RING	STN. STL.
27	650001	1	SPRING	STN. STL.
			DE DADTE	

\* = RECOMMENDED SPARE PARTS
\* = PARTS PROVIDED WITH STAINLESS STEEL SEAT RING

						MATERIAL	TOLER	<u>ANCES</u>		OCV Control Valves
										TULSA OKLAHOMA USA
							.XXX ±.00	)5	8" 3200 TANK SAFETY VALVE	
										6 3200 TANK SAFETT VALVE
						NO. REQ'D	DRAWN BY	DATE	SIZE	DRAWING NUMBER REV
					****	1	SD.J	03-20-06	_	
FCN	DATE	BY				COAL E	1	I.	ΙΛ.	225076
			<u> </u>			SCALE	CHKD BI	DATE		3250TS
REVISIO	<u>NS</u>		REF	DWG	NO'S	<b>1</b> 5%				020010
		ECN DATE REVISIONS					ECN DATE BY SCALE	UNLESS NOT	UNLESS NOTED   XX ±.015   XXX ±.005   ANGULAR ±0.5°   MACH. FINISH 125	UNLESS NOTED   XX ±.015   XXX ±.005   XXX ±.005   ANGULAR ±0.5°   MACH. FINISH 125   MACH. FINISH 125   SDJ 03-20-06   SCALE   CHKD BY DATE   SCALE   CHKD BY DATE   ANGULAR

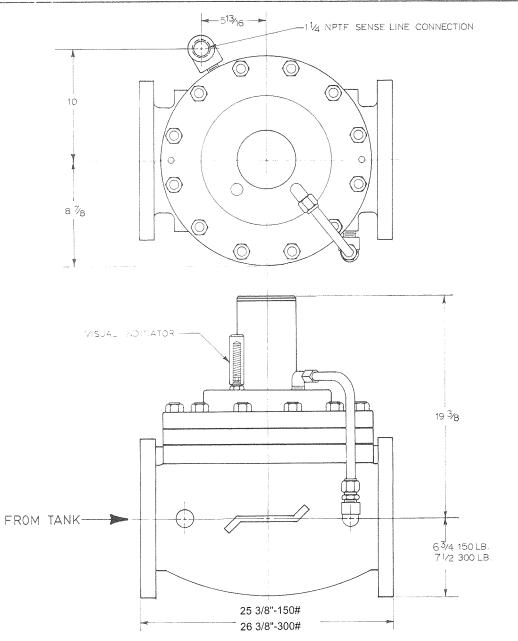

#### RECOMMENDED INSTALLATION

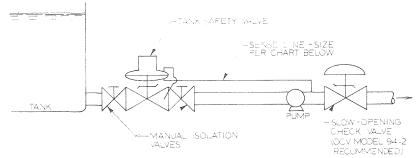

## <u>SPECIFICATIONS</u>


PRESSURE REQIDITO START VALVE OPEN	,5 PSID*
PRESSURE REQIDITO FULLY OPEN VALVE	.15 PSID*
VALVE OPENING TIME	.10 SECONDS OF LESS WITH 30 PS.D.* MIN. OPERATING PRESSURE & SENSE LINE SIZED PER CHART BELOW.
VALZE CLOSING FIME	LID SECONDS UR LESS WITH SENSE LINE SIZED PER CHART BELOW.
VALVE C <sub>V</sub> (FULL OPEN)	_760
VALVE WILL AUTOMATICALLY CLOSE IF DIAPHRA	AGM FAILS.


<sup>\*</sup>PUMP DICCHARGE HEAD MINUS TANK HEAD


# SENSE LINE REQUIREMENTS

DISTANCE, FT. VALVE TO PUMP	MIN. SCHED 40 PIPE SIZE
0 - 15	3/8
16 - 45	1/2
46 - 180	3/4
181 — 600	1
601 - 1500	1 1/4

E					MATERIAL	TOLERA		J.	i. Mari Pantuni Valunc
D						UNLESS NO		P	CEV CONTO VAIVES TUESA OKLAHOMA USA.
С						DECIMAL ±	005 SH 128/	QΠ	TANK SAFETY VALVE
В					THE RESERVE OF THE PERSON NAMED IN COLUMN TWO IS NOT THE PERSON NAMED IN COLUMN TWO IS NOT THE PERSON NAMED IN	ANGULAR +	1/2 <sup>1/</sup>	0	
					NO REQ'D	DRAWN BY	DATE	SIZE	DRAWING NUMBER REV
LA_								Name of	
CHG	E. C. NO	DATE	BY		SCALE	CHKD, BY	DATE	1	66TS-08∆
	DEVIETORS			BEE DIVIC NO'S		!		North I	0010 00A

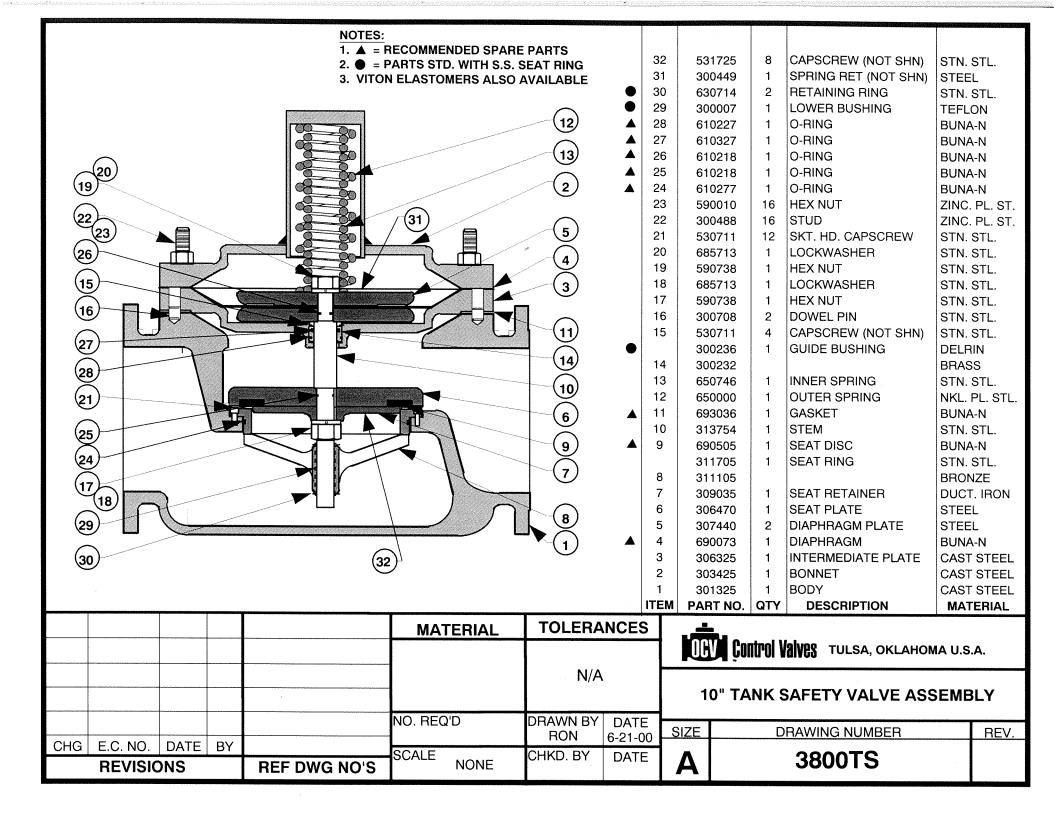

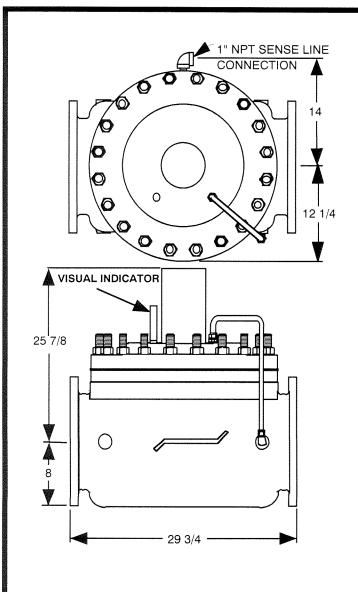

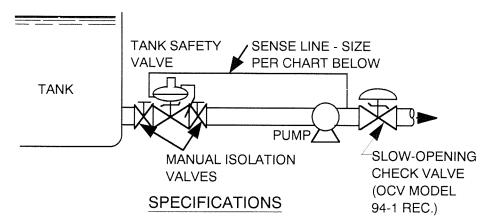

PRESSURE REQ'D TO START VALVE OPEN — 5 PSID\*
PRESSURE REQ'D TO FULL OPEN VALVE — 15 PSID\*

VALVE OPENING TIME 10 SECONDS OR LESS WITH 30 PSID\* MIN. PRESSURE AND

SENSE LINE SIZED PER CHART BELOW.

VALVE CLOSING TIME \_\_\_\_\_\_ 15 SECONDS OR LESS WITH

SENSE LINE SIZED PER CAHRT

BELOW.

VALVE Cv (FULL OPEN) 1250

VALVE WILL AUTOMATICALLY CLOSE IF DIAPHRAGM FAILS.

\*PUMP DISCHARGE HEAD MINUS FULL TANK HEAD

# SENSE LINE REQUIREMENTS


DISTANCE, FT. VALVE-TO-PUMP	MIN. SCHED 40
0 - 30	PIPE SIZE 3/4"
31 - 150	1"
151 - 600 600 -1 000	1 1/4"
000 - 1 000	1 1/2"


S. Contraction of the Contractio		,				
					MATERIAL	TOLERANCES
						FACE TO FACE FRACTIONAL ±3/32"
						OTHERS GENERAL ENVELOPE
CUO	E O NO	DATE	DV		NO. REQ'D	DRAWN BY DATE RON 6-21-00
CHG	E.C. NO.	DATE DNS	BY	REF DWG NO'S	SCALE NONE	CHKD. BY DATE



#### 10" TANK SAFETY VALVE INSTALLATION

1	SIZE	DRAWING NUMBER	REV.
	Α	66TS-10A	

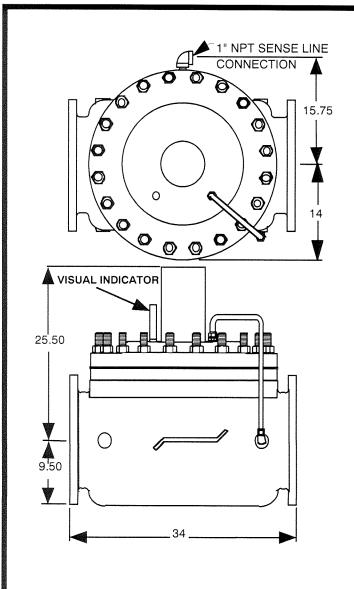

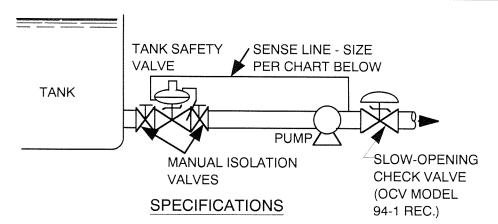

PRESSURE REQ'D TO START VALVE OPEN — 5 PSID\*
PRESSURE REQ'D TO FULL OPEN VALVE — 15 PSID\*

VALVE OPENING TIME 10 SECONDS OR LESS WITH 30

PSID\* MIN. PRESSURE AND SENSE LINE SIZED PER CHART

BELOW.

VALVE CLOSING TIME 15 SECONDS OR LESS WITH

SENSE LINE SIZED PER CAHRT

BELOW.

VALVE Cv (FULL OPEN) \_\_\_\_\_\_ 1700

VALVE WILL AUTOMATICALLY CLOSE IF DIAPHRAGM FAILS.
\*PUMP DISCHARGE HEAD MINUS FULL TANK HEAD

# SENSE LINE REQUIREMENTS

DISTANCE, FT. VALVE-TO-PUMP	MIN. SCHED 40 PIPE SIZE
0 - 30	3/4"
31 - 150 151 - 600	1"
600 -1 000	1 1/4" 1 1/2"

		·					
					MATERIAL	TOLERANCES	
						FACE TO FA FRACTIONA OTHERS GENERAL E	L ±1/8"
CHG	E.C. NO.	DATE	BY		NO. REQ'D	DRAWN BY RON	DATE 4-8-99
	REVISIONS		REF DWG NO'S	SCALE	CHKD. BY	DATE	



#### 12" TANK SAFETY VALVE INSTALLATION

SIZE	DRAWING NUMBER	REV.
Α	66TS-12A	

