

▲ Model 120-16

The Model 120-16 has a wide range of applications: anywhere the flow rate must be controlled or limited.  
Typical examples include: ► Pump systems ► Fuel metering systems

## SERIES FEATURES

- Modulates as required to prevent flow rate from exceeding a predetermined maximum.
- Opens and closes via discrete electrical signals.
- Closes to prevent backflow in the event of pressure reversal.
- Built-in orifice plate for sensing flow rate
- Extra-sensitive differential pilot
- Flow rate is adjustable with single screw
- Adjustable response speed
- Can be maintained without removal from the line
- Factory tested and can be pre-set to your requirements

## OPERATION

The rate of flow control pilot moves open or closed based on differential pressure created across the orifice plate. As the differential, hence the rate, increases, the pilot moves further closed, closing the main valve. As the differential decreases, the pilot moves further open, opening the main valve. The net result is a constant modulation of the pilot and main valve to hold the flow rate constant.

**ELECTRICAL ON-OFF ACTION:** When the coil of the solenoid pilot (4) is energized, the pilot is open, and the main valve opens under control of the rate of flow pilot, as described above. When the coil is deenergized, the pilot is closed, which forces the main valve to hold the flow rate constant.


**CHECK VALVE ACTION:** If downstream pressure should become higher than upstream pressure, check valve (7B) opens to admit the higher downstream pressure to the main valve diaphragm chamber, forcing the valve fully and tightly closed. At the same time, check valve (7A) closes to prevent any reverse flow through the pilot system.

## COMPONENTS

The Model 120-16 consists of the following components, arranged as shown on the schematic diagram:

- 1.) Model 65 Basic Valve Assembly
- 2.) Orifice Plate
- 3.) Model 2450 Rate of Flow Control Pilot
- 4.) Model 451 Two-Way Solenoid Pilot, N.C.
- 5.) Model 126 Ejector
- 6.) Model 141-2 Flow Control Valve (opening Speed Control)
- 7.) Model 141-1 Check Valve
- 8.) Model 123 Inline Strainer
- 9.) Model 155 Visual Indicator (optional)

## SCHEMATIC

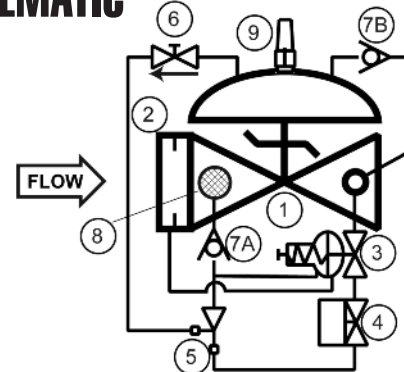

## RECOMMENDED INSTALLATION

- Install the valve with adequate space above and around the valve to facilitate servicing. Refer to the Dimension Table.
- Valve should be installed with the bonnet (cover) at the top, particularly 8" and larger valves, and any valve with a limit switch.
- Shut-off valves should be installed upstream and downstream of the control valve. These are used to isolate the valve during start-up and maintenance.
- In order to properly set the flow rate, a meter, or some other means of measuring flow, should be installed in series with the control valve.

## SIZING

The following chart states the minimum and maximum flow rate with standard bore orifice plate, based on a fluid specific gravity of 0.8. This means the valve can be adjusted to control within the ranges shown. Lower flow ranges are possible through the use of smaller orifice plate bore and all ranges are adjustable within a 4:1 ratio (high to low flow). Consult the factory for assistance.

## MAX. PRESSURE

(The pressures listed here are maximum working pressures at 100°F)

END CONNECTIONS	DUCTILE IRON	STEEL WCB	STEEL LCB	STN. STL.	ALUMINUM
150# Flanged	247	286	267	276	286
300# Flanged	740	740	696	719	----

NOTE: Maximum pressures may be limited by the solenoid.

SIZE	1 1/4", 1 1/2"	2"	2 1/2"	3"	4"	6"	8"	10"	12"	14"	16"	24"
MIN FLOW, GPM	40	62	97	145	251	559	942	1,321	1,871	2,245	2,994	8,762
MAX. FLOW, GPM	158	247	387	581	1,004	2,237	3,769	5,283	7,485	8,982	11,796	35,047

phone: (918)627.1942 • fax: (918)622.8916 • 7400 East 42nd Place, Tulsa, OK 74145  
email: sales@controlvalves.com • website: www.controlvalves.com

**Global performance. Personal touch.**

REVISED 8/5/19

# Model 120-16 (Aviation Fueling)



## SIZES GLOBE/ANGLE

Flanged Ends - 1 1/4" - 24" (globe)  
1 1/4" - 16" (angle)

## FLUID OPERATING TEMPERATURE RANGE

(Valve Elastomers)

Buna -40°F to 180°F

Viton 20°F to 230°F

Fluorosilicone -40°F to 150°F

## MATERIALS

Consult factory for others.

**Body/Bonnet:** Ductile Iron (epoxy coated),  
Carbon Steel (epoxy coated), Stainless Steel,  
Aluminum

**Seat Ring:** Stainless Steel,  
Bronze

**Stem:** Stainless Steel, Monel

**Spring:** Stainless Steel

**Diaphragm:** Buna-N, Viton, (Nylon reinforced)

**Seat Disc:** Buna-N, Viton

**Pilot:** Stainless Steel, Bronze

**Other pilot system components:**

Stainless Steel, Bronze/Brass

**Tubing & Fittings:**

Stainless Steel, Copper/Brass

## SPECIFICATIONS (Typical Aviation Fueling Application)

The rate of flow/solenoid shut-off/check control valve shall function to (1) control or limit the flow rate, regardless of fluctuations in upstream or downstream pressure, (2) open and close via an electrical signal, and (3) close to prevent reverse flow.

### DESIGN

The rate of flow/solenoid shut-off/check control valve shall be a single-seated, line pressure operated, diaphragm actuated, pilot controlled globe valve. The valve shall seal by means of a corrosion-resistant seat and a resilient, rectangular seat disc. These, and other parts, shall be replaceable without removing the valve from the line. The stem of the main valve shall be guided top and bottom by integral bushings. Alignment of the body, bonnet and diaphragm assembly shall be by precision dowel pins. The diaphragm shall not be used as a seating surface, nor shall the pistons be used as an operating means. The orifice plate shall be integrally-installed in the valve inlet flange. The pilot system shall be furnished complete, installed on the main valve and include a needle valve speed control and an inline strainer. The rate of flow control valve shall be operationally and hydrostatically tested prior to shipment.

### MATERIALS OF CONSTRUCTION

The main valve body and bonnet shall be ductile iron. All ferrous surfaces shall be coated with 4 mils of epoxy. The main valve seat ring shall be stainless steel. Elastomers (diaphragms, resilient seats and O-rings) shall be Buna-N. The control pilot shall be stainless steel, while the opening speed control and control line tubing shall be stainless steel. The orifice plate shall also be stainless steel.

### OPERATING CONDITIONS

The rate of flow/solenoid shut-off/check control valve shall be suitable for controlling the flow rate over a range of <X to X (limited to 4:1)> GPM at pressures ranging from <X to X> psi.

### ACCEPTABLE PRODUCTS

The rate of flow/solenoid shut-off/check control valve shall be a <size> Model 120-16, <globe pattern, angle pattern>, with <150# flanged, 300# flanged> end connections, as manufactured by OCV Control Valves, Tulsa, Oklahoma, USA.

U.S. DIMENSIONS - INCHES

DIM	END CONN.	1 1/4-1 1/2	2	2 1/2	3	4	6	8	10	12	14	16	24
A	150# FLGD	8 1/2	9 3/8	10 1/2	12	15	17 3/4**	25 3/8	29 3/4	34	39	40 3/8	62
	300# FLGD	8 3/4	9 7/8	11 1/8	12 3/4	15 5/8	18 5/8**	26 3/8	31 1/8	35 1/2	40 1/2	42	63 3/4
C	150# FLGD	4 1/4	4 3/4	6	6	7 1/2	10	12 11/16	14 7/8	17	--	20 13/16	--
	300# FLGD	4 3/8	5	6 3/8	6 3/8	7 13/16	10 1/2	13 3/16	15 9/16	17 3/4	--	21 5/8	--
D	150# FLGD	3	3 7/8	4	4	5 1/2	6	8	11 3/8	11	--	15 11/16	--
	300# FLGD	3 1/8	4 1/8	4 3/8	4 3/8	5 13/16	6 1/2	8 1/2	12 1/16	11 3/4	--	16 1/2	--
E	ALL	6	6	7	6 1/2	8	10	11 7/8	15 3/8	17	18	19	27
F (OPT)	ALL	3 7/8	3 7/8	3 7/8	3 7/8	3 7/8	3 7/8	6 3/8	6 3/8	6 3/8	6 3/8	6 3/8	8
H	ALL	10	11	11	11	12	13	14	17	18	20	20	28 1/2

\*GROOVED END NOT AVAILABLE IN 1 1/4"

\*\*\*\*Note: for military fueling valves, 6" (DN150) 150# flanges have 20" (20 mm) face to face dimensions and 6" (DN150) 300# flanges have 21" (533.4 mm) face to face dimensions.


For maximum efficiency, the OCV control valve should be mounted in a piping system so that the valve bonnet (cover) is in the top position. Other positions are acceptable but may not allow the valve to function to its fullest and safest potential. In particular, please consult the factory before installing 8" and larger valves, or any valves with a limit switch, in positions other than described. Space should be taken into consideration when mounting valves and their pilot systems.

A routine inspection & maintenance program should be established and conducted yearly by a qualified technician. Consult our factory @ 1-918-627-1942 for parts and service.

## How to order your Model 120-16 valve

When ordering please provide:

Fluid to be controlled - Model Number - Size - Globe or Angle -  
End Connection - Body Material - Trim Material - Pilot Options -  
Flow Rate Setting or Range - Special Requirements / Installation  
Requirements

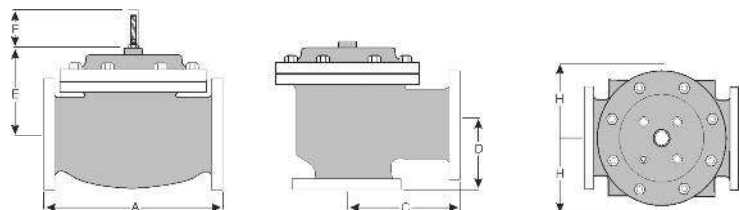

QUALITY SYSTEM  
REGISTERED TO  
ISO 9001

United States/Canada Joint  
Certification Program (JCP)  
Certification Number 0073030

phone: (918)627.1942 • fax: (918)622.8916 • 7400 East 42nd Place, Tulsa, Oklahoma 74145  
email: sales@controlvalves.com • website: www.controlvalves.com